

Safety Warnings

Portable Bluetooth® Party Speaker

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation


- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- A minimum distance of 5 cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

 The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Built-in Battery Care

- Your product is powered by a built-in rechargeable battery.
- The battery can be charged and discharged hundreds of times, but will eventually wear out.

- Unplug the charger from the electrical plug and the product when not in use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep your device in a cool, moisture-free environment that's less than 32°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- If you plan to store your device for longer than three months, charge the battery for an hour every three months to keep it fresh.
- The unit should be fully recharged after using the device each time. This will keep the health of the battery.

Battery warning!

- The battery used in this product may present a risk of fire or chemical burn if mistreated.
- Do not attempt to open the product or replace the battery. It is built-in and not changeable. Use of other batteries may present a risk of fire or explosion and the warranty will be terminated.
- Only recharge your battery with the provided approved mains cable designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Batteries may explode if damaged.
- Please be charged with the correct posture.

Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

 
- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

~ **AC voltage:** This symbol indicates that the rated voltage marked with the symbol is AC voltage.

== **DC voltage:** This symbol indicates that the rated voltage marked with the symbol is DC voltage.

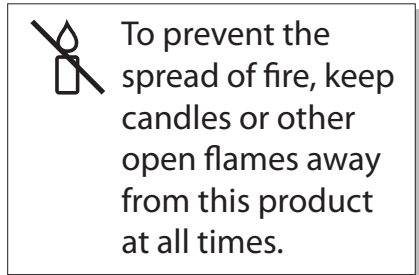

Useful Information and Licences

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.
UK: 0344 561 1234
IRE: 0818 810575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owners.

This radio is future-ready because it contains FM which is a future technology standard being adopted across Europe.

All trademarks are the property of their respective owners and all rights are acknowledged.

Currys Group Limited (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

Currys Ireland Limited (259460)
3rd Floor Office Suite, Omni Park SC
Santry, Dublin 9, Republic of Ireland

This product is distributed and warranted exclusively by Currys Group Limited.
"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

(Safety-JVC Portable Bluetooth® Party Speaker-230815-V5)

JVC

Instruction Manual

Portable Bluetooth® Party Speaker

MX-D719PB



 Bluetooth®



Before using this appliance, read all safety instructions carefully first in the Safety Warnings booklet and keep them for future reference.

Contents

Safety Warnings	Safety Warnings booklet
Unpacking	3
Product Overview	4
Top View	4
Rear View.....	5
Trolley Handle Use	6
Connections	7
Stereo Chain Connections.....	7
Connecting a Mobile Device	7
Connecting a Microphone	8
Connecting a Guitar.....	8
Charging the Unit	9
Battery Life	9
Basic Operating	10
Switching ON / OFF	10
Standby Power Mode	10
Selecting Modes.....	10
Adjust the Speaker Level Settings and Effects	10
Adjust the LED light	10
FM Radio Operation	11
Tuning in a Station.....	11
Using the USB	12
LINE IN (AUX IN) Operation	12
Bluetooth® Operation	13
Maintenance	13
Cleaning the Unit.....	13
Hints and Tips	14
Product Fiche and Specifications	15

Thank you for purchasing your new product.

 
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

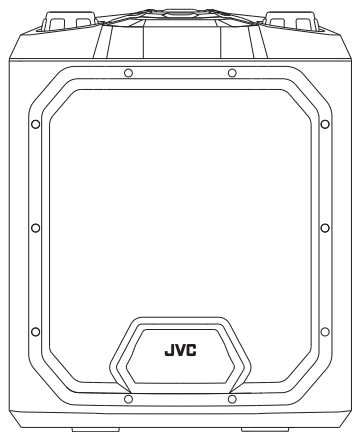


Main Unit

 


Mains Cable

 

 3.5 mm to 3.5 mm stereo audio cable

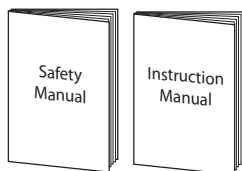

Safety & Instruction Manual

 


Quick Start Guide




- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Centre on **0818 810575**.

Product Overview

 Front View

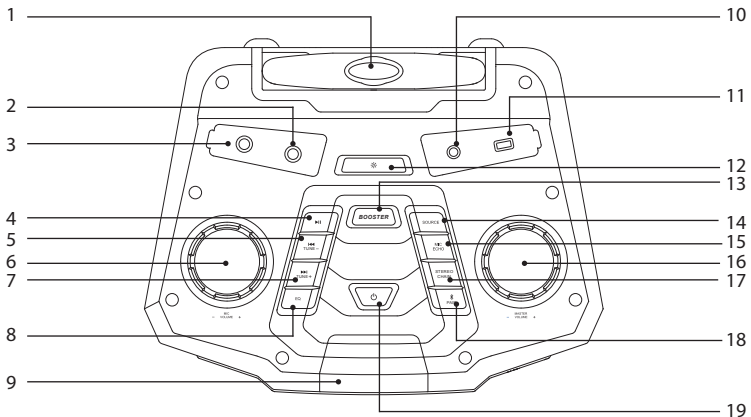


1. **Handle**
2. **GUITAR IN** Socket
3. **MIC IN** Socket
4. **▶||** Play/Pause Button
5. **◀◀TUNE-** Button
6. **MIC -VOLUME+** Dial
7. **▶▶TUNE+** Button
8. **EQ** Button
9. **LED Display**
10. **LINE IN** Socket
11. **5V 1A** USB Socket
12. ***** Light Button
13. **BOOSTER** Button
14. **SOURCE** Button
15. **MIC ECHO** Button
16. **MASTER -VOLUME+** Dial
17. **STEREO CHAIN** Button
18. ***Bluetooth®** Button
19. **⏻** ON/OFF Button

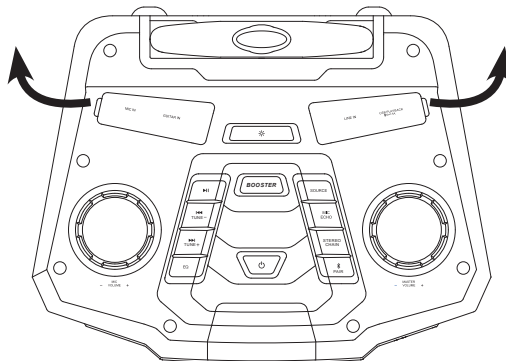 


Open the covers for the **MIC IN**, **GUITAR IN**, **LINE IN** and **5V 1A** socket.

 Rear View

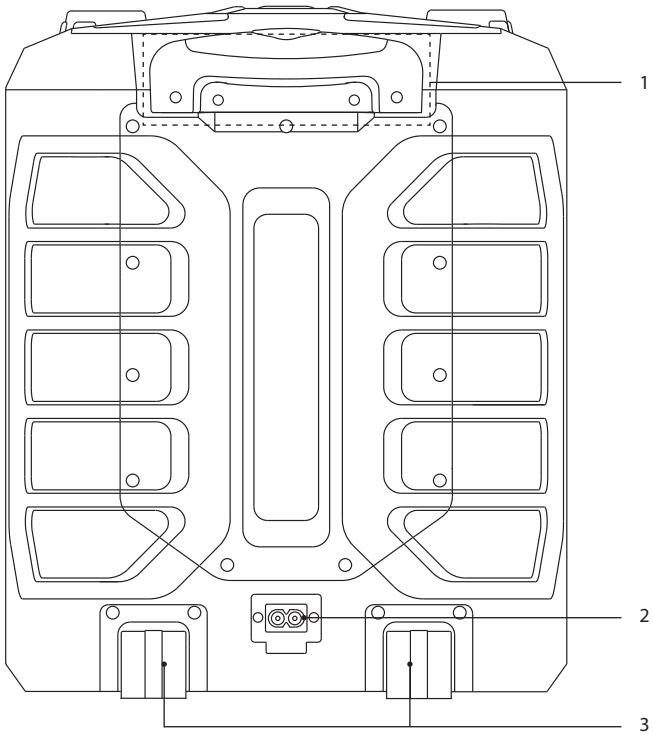

 
- 1. **Trolley Handle**
- 2. **100-240V ~50/60 Hz AC IN~ Socket**
- 3. **Casters**

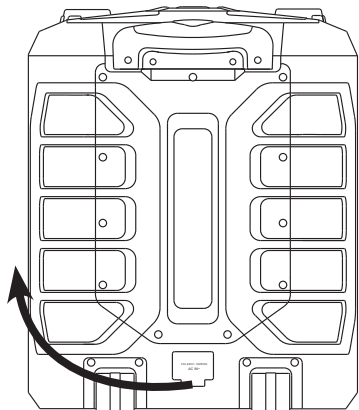



Open the cover for the mains socket.

Trolley Handle Use

 1. Press the button on the handle to release the lock.

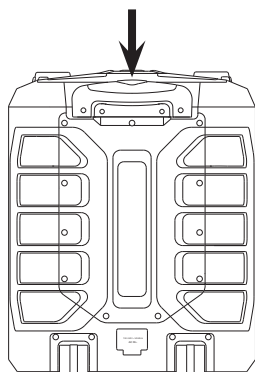

  2. Pull out the handle from the unit for easy carrying.

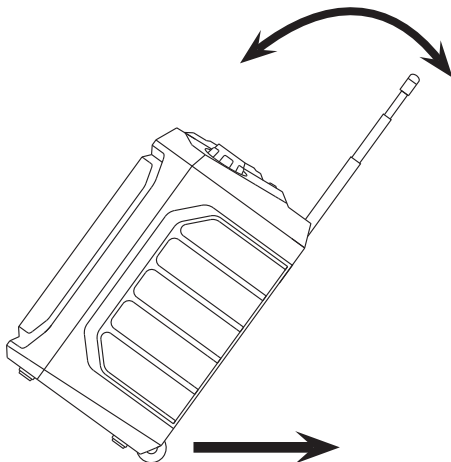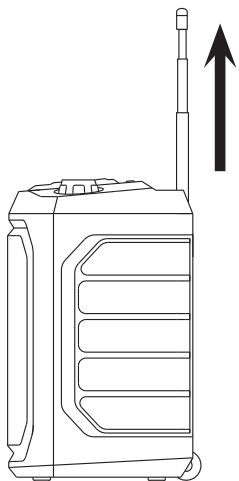

Connections

Stereo Chain Connections



To create a stereo chain connection, you need to have two megatower hi-fi systems.

True Wireless (TWS) Connection

 
1. Switch both hi-fi systems in **BT** (Bluetooth) mode.
2. Press the **STEREO CHAIN** button on both the speakers at the same time. Both units will display **PARTY SELECT**.
3. Press **◀◀/▶▶** button to select between **HOST** and **SLAVE** for each unit. The **SLAVE** unit will prompt a beep tone to indicate that both units are now connected.
4. Enable your Bluetooth device and make sure it is in searching mode.
5. Select "**MX-D719PB**" and enter "**0000**" for the password if necessary.
6. The master speaker will act as the left channel during TWS and will receive the Bluetooth signal, the other speaker will act as the right channel to play music.



Press and hold the **STEREO CHAIN** button to disconnect the TWS connection.

Connecting a Mobile Device


Connect the **LINE IN** (AUX IN) socket of the main unit to the headphone jack on a mobile device (not included) with a 3.5 mm to 3.5 mm stereo audio cable illustrated below.

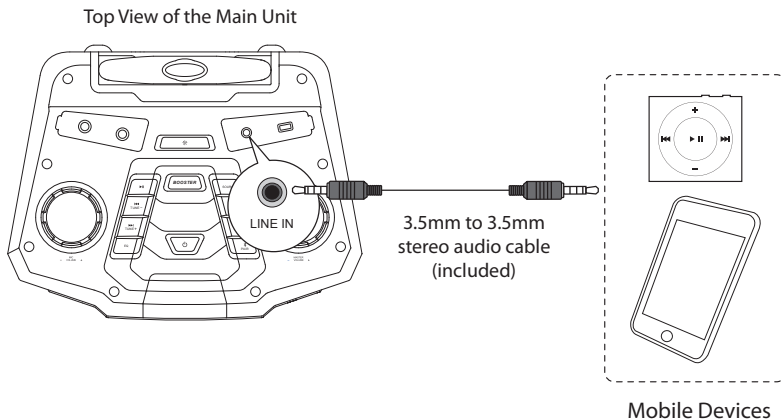

Connecting a Microphone


Connect your microphone (not included) into the **MIC IN** socket.

 Turn the **MIC -VOLUME+** dial to adjust the volume of the microphone.

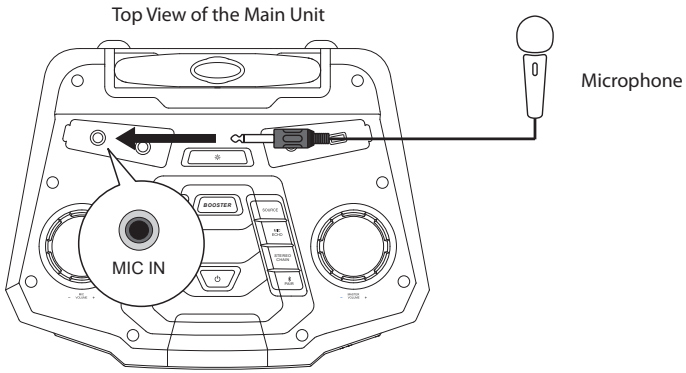

Connecting a Guitar

 You can connect a guitar (not included) to the unit directly through the **GUITAR IN** socket on the top panel.

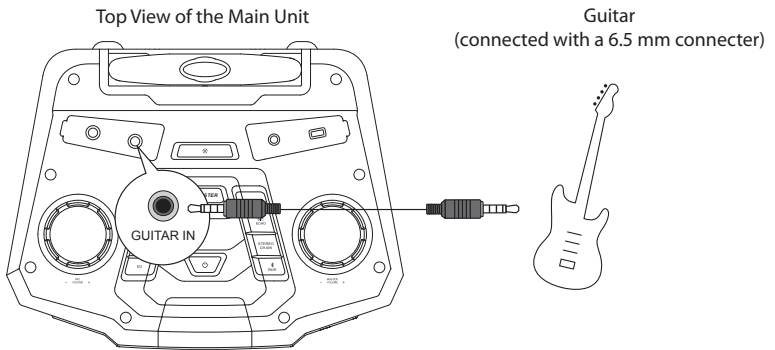

Charging the Unit

 


- Ensure all audio connections of the unit are connected before connecting to the mains power socket.
 - Make sure the mains plug is firmly inserted into the mains socket.
 - Do not overcharge the battery as it may shorten its life. Disconnect the mains cable after the unit is fully charged.
 - The unit should be fully recharged after using the device each time. This will keep the health of the battery.
 - If you plan to store your device for longer than 6 months, charge the battery for an hour every 6 months to keep it fresh.
 - Charging time varies depending on conditions of use of the battery and the output voltage of your charging device.
 - The unit will get warm during charging. This is not a malfunction.
-
- The unit has a built-in rechargeable battery, which should be charged before using the speaker for the first time.
 - The battery is charged automatically whenever the unit is connected to a mains supply.
 - Charge the unit for 4 hours before first time use.
 - Connecting the unit to any other power source may damage the unit. Unwind the mains cable to its full length. Connect the end of the cable to the **AC IN~** socket at the rear of the unit and then connect the mains plug to the mains socket. The unit is now connected and ready to use.

Battery Life

The unit has approximately 8 hours of playback time in fully charge status and in medium sound level. Time stated above may vary, depending on ambient temperature or conditions of use.

Rear View of the Main Unit

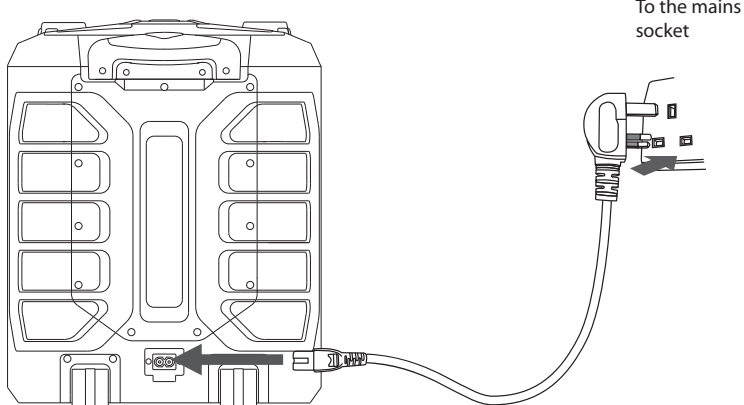

- While the unit is connected to the mains supply, the display will show **AC**.
- While the unit is disconnected with its mains cable, the display will show **BATTERY**.
- In **STANDBY** mode, the display will show **CHG** while charging, and go blank after the unit is fully charged.
- After the unit is connected to the mains supply, the display will show **CHG** for about 10 seconds and then go blank if the unit is already fully charged.

Basic Operating

Switching ON / OFF

- Press **⏻** button to switch the unit on. The display will show "**ON**". Then, the system will switch to the last selected source.
- Press and hold **⏻** button to show the in-built battery status ("**BATT EMPTY**" / "**BATT LOW**" / "**BATT HALF**" / "**BATT HIGH**" / "**BATT FULL**").
- Press **⏻** button to switch the unit back to standby mode. The display will show "**STANDBY**" and then go blank.



While the battery level is low, the display will show **BATT LOW** every 30 seconds.

Standby Power Mode

The unit features an Standby Power mode. It automatically turns off if the unit is idle or the external unit is disconnected, switched off or the volume is too close to mute for about **15** minutes.

Selecting Modes

Turn the **SOURCE** button to switch between **TUNER (FM)**, **LINE IN**, **USB** and **BT (Bluetooth®)** modes. The selected mode will show on the display.

Adjust the Speaker Level Settings and Effects

Adjusting the Volume

To increase or decrease the volume, turn the **MASTER –VOLUME+** dial.

Preset Equalizer

During playback, press the **EQ** button repeatedly to select: **ROCK / JAZZ / SAMBA / POP / FLAT / FUNK**.

BOOSTER

Press **BOOSTER** button to switch on/off the booster effect. The volume level will be boosted immediately.



The EQ cannot work under **BOOSTER** mode. The display will show "**EQ INVALID**" if you press **EQ** button.

Adjust the LED light

Press the **LIGHT** button repeatedly to select the LED effect between **LED1**, **LED2**, **LED3**, **LED4**, **LED5**, **LED6** and **OFF**.

FM Radio Operation



- The search may not stop at a station with a very weak signal.
- If reception is poor, move the unit to a stronger signal location.

Press **SOURCE** button repeatedly to select the tuner source. The display will show "**TUNER**".

Tuning in a Station

Auto Tuning

1. Press and hold **▶▶** button to start auto tuning. The screen will show **AUTO** and then start auto tuning. Press **▶▶** button again to stop the auto tuning.
2. The searched radio stations will be stored as preset station.



The search may not stop at a station with a very weak signal.

Recalling a preset station

1. Press **▶▶** button and the display will show **P-XX** (from **P-01** to **P-30**).
2. Press **◀◀TUNE-** / **▶▶TUNE+** button to select your desired preset station.

Manual Tuning

 
Press and hold **◀◀** or **▶▶** button to start the forward or reverse scanning. The display will show the frequency being searched. Once a station has been found, the scanning will stop automatically.



With FM radio it may be necessary to fine tune each station by pressing **◀◀** or **▶▶** button repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor, try moving the unit to another location.

Using the USB

By connecting a USB mass storage device (including USB flash memory or USB flash players) to this unit, you can enjoy the device's stored music through the unit.

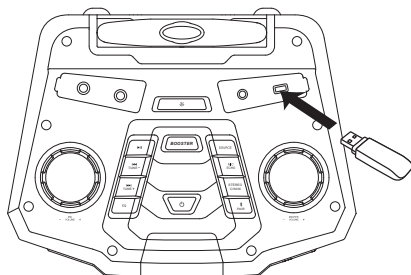

1. Press **SOURCE** button repeatedly to select the **USB** source. The display will show "**USB**", and then "**LOAD**".
 - If there is no USB device connected, the display will show "**NO USB**".
 - If there is no MP3 file in the USB device, the display will show "**NO MUSIC**".
2. The display will show the number of **ALBUM** and **FILE** stored in the USB device, and then start playback.
3. Press and hold **◀◀** or **▶▶** button to select next/previous album, and play the first track.
4. Press and hold **▶||** button to select different **REPEAT** mode: **REPEAT ONE** / **REPEAT ALBUM** / **REPEAT ALL** / **REPEAT OFF**.



- The player supports the USB music file format of MP3 only.
- The unit can support USB devices with up to 32 GB of memory.
- You may need to press **▶||** button to start playback after inserting the USB device.
- The unit may not be compatible with all USB devices, this is not an indication of a problem with the unit.

LINE IN (AUX IN) Operation

1. While in **ON** mode, press the **SOURCE** button to select the **LINE IN** mode. The words "**LINE**" will be shown on the display.
2. Operate your audio device directly for playback features.
3. Turn the **MASTER -VOLUME+** dial to adjust the volume to your desired level.



The **◀◀** and **▶▶** buttons are invalid in **LINE IN** mode.

Bluetooth® Operation

Pairing the unit with a *Bluetooth*® device to listen to music:

1. Press the **SOURCE** button to select the *Bluetooth*® mode. The display will show “**BT**”, and then “**BT PAIRING**”.
2. Activate your *Bluetooth*® device and select the search mode. “**MX-D719PB**” will appear on your *Bluetooth*® device list.
3. Select “**MX-D719PB**” and enter “**0000**” for the password if necessary. After the connection, the display will show “**BT**” and the unit will make beep twice.
4. To disconnect the *Bluetooth*® function,
 - Switch to another function on the unit;
 - Disable the function from your *Bluetooth*® device. The unit will beep twice;
 - Press and hold * Bluetooth button.

The unit will make beep twice and then the display will show “**BT PAIRING**”.

If your *Bluetooth*® device supports A2DP, play music via your device.

- To pause / resume playback, press **▶||**.
- To skip to a track, press **◀◀** or **▶▶**.
- Turn the **MASTER -VOLUME+** dial to increase or decrease the volume.



- The operational range between the unit and the device is approximately 10 metres.
- Before connecting a *Bluetooth*® device to the unit, ensure you know the device's capabilities.
- Compatibility with all *Bluetooth*® devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

Maintenance

Cleaning the Unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the units, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance

- For UK, please call our UK Call Centre on **0344 561 1234**.
- For Ireland, please call our Ireland Call Centre on **0818 810575**.

General

Problem	Solution
No power.	<ul style="list-style-type: none">• Ensure the mains plug is connected.• Make sure that you select the ON mode.
No sound from the unit.	Please try either one of the solutions below: <ul style="list-style-type: none">• Make sure that the unit is not muted. Turn the MASTER – VOLUME+ dial to resume normal listening.• Press Φ button to switch the unit to standby mode. Then press the button again to switch the unit on.• Unplug the unit from the mains socket, then plug them again. Switch on the unit.
Sound is distorted	<ul style="list-style-type: none">• Volume is too high. Adjust the volume control.
Not charging	<ul style="list-style-type: none">• Ensure that the mains cable is correctly connected with the unit.
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none">• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.

Radio

Problem	Solution
Poor radio reception.	<ul style="list-style-type: none">• Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Desired station not found.	<ul style="list-style-type: none">• Weak signal. Search manually.• If reception is still poor, adjust the position of the unit.

USB

Problem	Solution
Unable to insert USB device	<ul style="list-style-type: none">• Insert the USB device the other way round.
Cannot play some files from USB device	<ul style="list-style-type: none">• Check the file format.• Only MP3 file formats are supported.

Bluetooth®

Problem	Solution
I cannot find "MX-D719PB" on my Bluetooth® device.	<ul style="list-style-type: none">• Ensure the Bluetooth® function is activated on your Bluetooth® device.• Ensure you have paired your unit with the Bluetooth® device.• The unit has a Bluetooth® function that can receive a signal within 10 metres. Keep a distance within 10 metres between the unit and your Bluetooth® device.



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Product Fiche and Specifications

Brand	JVC
Model	MX-D719PB
System Section	
Power Supply	AC ~100 - 240 V ~ 50/60 Hz
Power Consumption	50 W
Working Environment - Temperature	-10 ~ +35 °C
Working Environment - Relative Humidity	5% ~ 90%
Unit Dimension (W) × (D) × (H)	330 mm × 261 mm × 410 mm
Speakers Section	
Output RMS Power	50 Watts RMS output
Frequency Response	±3 dB (60 Hz ~ 20 kHz)
Bluetooth Section	
Bluetooth Version	V4.2
Maximum Transmitted Power	4 dBm
Frequency Bands	2402 MHz ~ 2480 MHz
Radio Section	
Frequency Range	FM 87.5 – 108 MHz
USB Section	
USB Memory Stick Memory Size	Up to 32 GB

Features and specifications are subject to change without prior notice.



Declaration of Conformity (RED)

Hereby, Currys Group Limited declares that the radio equipment type [MX-D719PB] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: **<https://www.currys.co.uk/>**

Click on **HELP & SERVICES/Repairs & maintenance/Product Manuals** and enter the model number.

Declaration of Conformity (RER)

Hereby, Currys Group Limited declares that the radio equipment type [MX-D719PB] is in compliance with Radio Equipment Regulations 2017 (S.I. 2017/1206).

The full text of the UK declaration of conformity is available at the following internet address: **<https://www.currys.co.uk/>**

Click on **HELP & SERVICES/Repairs & maintenance/Product Manuals** and enter the model number.

For Help and Support Call

UK: 0344 561 1234

Ireland: 0818 810575

This product is distributed and warranted exclusively by Currys Group Limited.

"JVC" is the trademark of JVCKENWOOD Corporation,
used by Currys Group Limited under license.

(IB-MX-D719PB-230815-V5)